


Spintec ICC 5 cell update kit instruction.

To be able to use your ICC on 5 cell packs with hardware version 1.4 or lower, you will need to install an update kit. These instructions tell you how to install this kit.


Make sure you have firmware version 1.06b or higher to enable the 5 cell options!

The kit consists of two wires joined together at one end (Y-shape). At each end there is a crocodile clip (3 in total). In one wire there is a resistor of 100 ohms.

Install the kit according to this drawing:

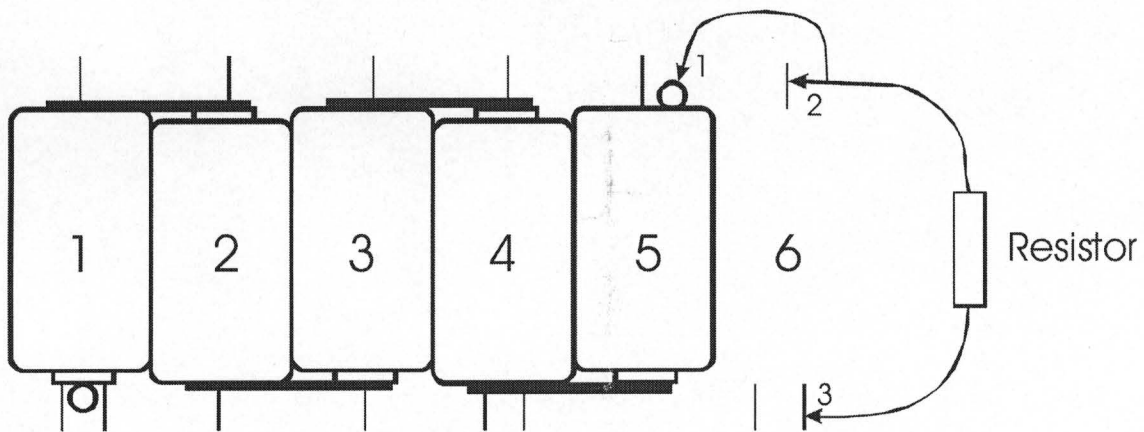

Make sure you connect clip number 1 to the battery bar directly on the cell. Do not connect it to the contact probe next to it! (No damage will be done otherwise, but measurement accuracy will be poor). Clips number 2 and 3 need to be placed on the probes as shown.

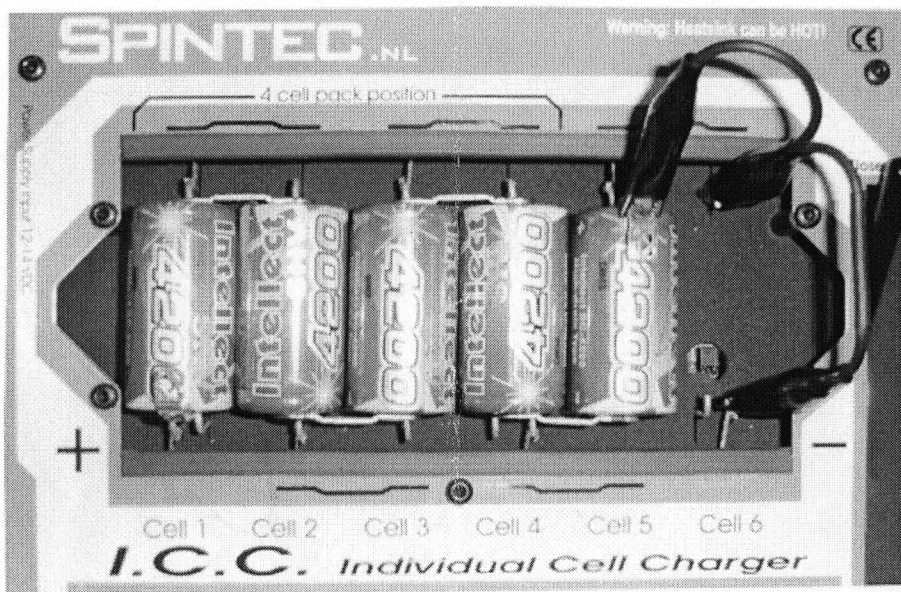

Good luck!